

# ELBA

**COOKER HOOD**  
**ESH-J7695(BK)/ESH-J7695(SS)**  
**ESH-J9095(BK)/ESH-J9095(SS)**

## **Owner's Manual**

Please read this manual carefully before operating your set.

Retain it for future reference.

Record model number and serial number of the set.

See the label attached on the set and quote this information to your dealer when you require service.

 
**For The Warranty Terms & Conditions, Please Refer To Warranty Certificate**

Please read this instruction carefully. It is advisable to keep this instruction manual in a safe place for future reference.

## **SAFETY PRECAUTIONS**

- 1.** Keep electrical appliances out of reach from children. Do not let them to operate the appliances without supervision.
- 2.** To protect against the risk of electrical shock, do not immerse the product, cord or plug into water or any other liquid.
- 3.** This product is for household and indoor use only.
- 4.** This product is not intended for use by person (including children) with reduced physical, sensory or mental capabilities unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 5.** If the power cord or plug is damaged, it must be replaced by the service centre or a qualified service technician to avoid hazard.
- 6.** Before installation, check if the mains supply voltage is matched with the voltage stated on the rating plate of the hood.
- 7.** There must be adequate air ventilation of the room when the cooker hood is used with the cooking appliances with burning gas or other fuels.
- 8.** Ensure that the installation of exhaust complies with the standard of local building, gas and electrical authorities.
- 9.** Do not ignite flames in the pans.
- 10.** There is a risk of fire if cleaning is not carried out in accordance with this instruction.

## PRODUCT DESCRIPTION

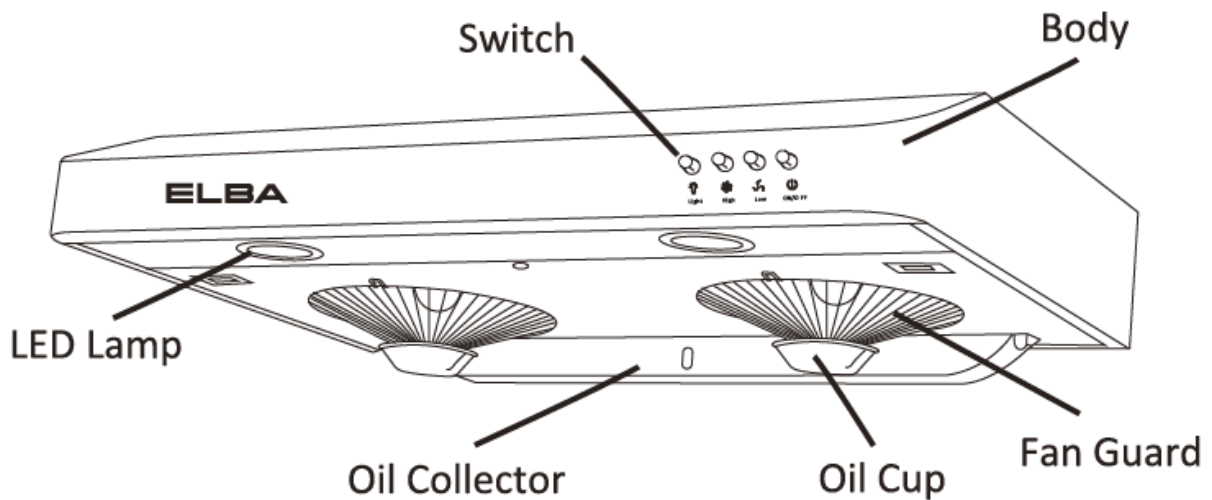

## ASSEMBLY INSTRUCTIONS

 
 
 
Please check the following before installation:

- Installation of hood must be carried out by an authorized or qualified technician.
- For optimum air extraction, avoid having too many windows surrounding the cooker hood which will cause air convection.
- Make sure the hood is in level after installation to avoid oil spill over from the oil cup collectors.
- The optimum height for the installation is between 650 to 750mm which measure from the bottom of the hood to the top of the hob.
- Remove all packaging materials from the cooker hood. Check if both sides of the cooker hood have a metal hook installed.

Please ensure the power supply is OFF when installing the hood.

1. Loosen the screws on the metal hook but do not loosen completely. Allow the metal hook to move up and down slightly.
2. Using the metal hook provided, determine the height of the cooker hood to be installed on the wall. Mark the wall with two markers left and right then drill the hole at the size 1.4"
3. Plug the plastic anchor into the holes tightly. Fix the installation screws by leaving 5mm gap from the wall.
4. Hang the cooker hood to the installation screws of 5mm gap and tighten the screws firmly.
5. Plug in the wall plug and switch on the power.



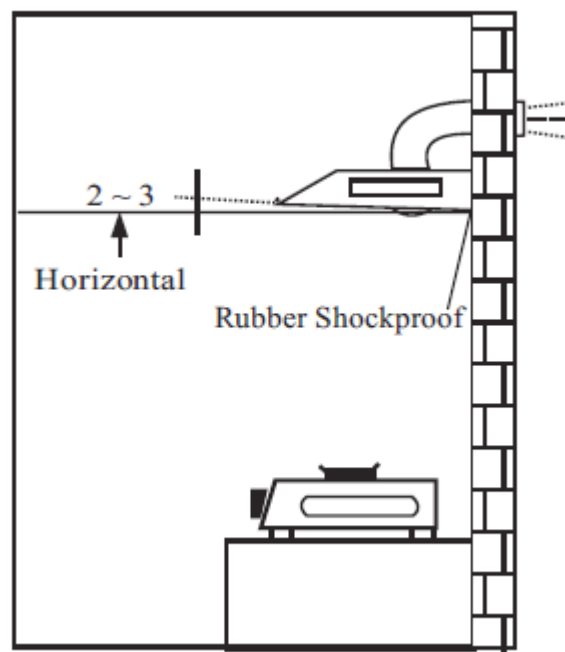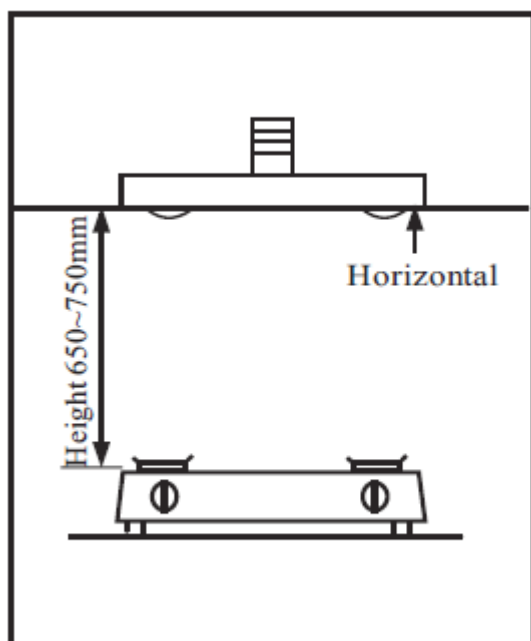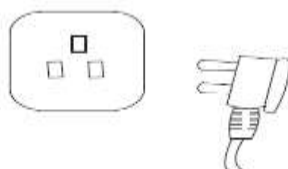

Note: Ensure that the plug is installed to the power point with proper earthing.



## INSTALL EXHAUST PIPE

- Lift the pipe at the drilled hole (150mm), then seal it tight with adhesive tape.
- Install cooker hood with the metal expansion bolt hanging at the hooks, attach the padding and spring gasket then tighten the nut.

## OPERATING INSTRUCTIONS

1. Press the  ON/OFF button to turn the unit on and off.
2. Press the  Low Button to active cooker hood in low fan speed. Press the  High Button to active cooker hood in high fan speed.
3. Press the  Light button to illuminate the lamp on/off.  
(Remarks: The Light function is independent from the ON/OFF button)

## CLEANING AND MAINTENANCE

- The hood must always be disconnected from the electricity supply before carrying out the maintenance.
- Clean the hood with damp cloth, hot water and mild detergent. Do not use chemical, steel, wooden or abrasive cleaners to clean the hood.
- Clean the oil cups when they are more than half filled to avoid the oil from spilling.
- Remove the oil cups, wash in hot soapy water, dry and fit back into the hood. Do not use the hood without the oil cup installed.
- Avoid spilling water into motor and electronic component.

## TROUBLESHOOTING

The motor & light is not working;

1. Check control panel and button, if the control panel or button is damaged please replace it.
2. Check power outlet or plug, ensure power outlet and plug is properly installed.

The motor is not working but the light is on;

1. It might be the capacitor error causing the motor unable to work properly.
2. Check control panel and button, if the control panel or button is damaged please replace it.
3. If motor faulty, please contact authorized service centre for inspection and service.

The motor is working but the light is off;

1. Check control panel and button, if the control panel or button is damaged please replace it.
2. If the control panel and button are functioning, please replace with a new bulb with proper rating.

Warning: Please ensure power is turned off before replacing new bulb.

Abnormal tremendous vibration;

1. Ensure fan is properly installed.
2. Please tighten the fan with the loose-fitting axle or the bolts.

Poor exhaust power;

1. Ensure the hood is installed at a recommended height.
2. Motor or capacitor may cause poor exhaust power, kindly request for a service.
3. Please clean hood regularly to maintain best exhaust power.
4. Ensure nothing is preventing the flue to exhaust.

## MAIN SPECIFICATION

<b>Model No.</b>	ESH-J7695(BK)	ESH-J7695(SS)
<b>Motor Power:</b>	150W	150W
<b>Power Input:</b>	220~240V~	220~240V~
<b>Frequency:</b>	50/60Hz	50/60Hz
<b>Light:</b>	≤ 2X1.5W	≤ 2X1.5W
<b>Flue Outlet:</b>	φ150mm	φ150mm
<b>Product Size:</b>	750x510x120mm	750x510x120mm

<b>Model No.</b>	ESH-J9095(BK)	ESH-J9095(SS)
<b>Motor Power:</b>	150W	150W
<b>Power Input:</b>	220~240V~	220~240V~
<b>Frequency:</b>	50/60Hz	50/60Hz
<b>Light:</b>	≤ 2X1.5W	≤ 2X1.5W
<b>Flue Outlet:</b>	φ150mm	φ150mm
<b>Product Size:</b>	895x510x120mm	895x510x120mm

### NOTICE

This product must not be disposed together with domestic waste. It has to be disposed at an authorized place for recycling of electrical and electronic appliances. By collecting and recycling waste, you help to save natural resources and make sure the product is disposed in an environmental friendly and healthy way.



**ELBA**